

Digital Timer Instruction Sheet

1. TIME START UP

Before initial use, plug the timer in for at least 30 minutes to charge the internal battery.

After the screen displays, the unit is ready for programming.

Press the reset button, all of display all of the display shows for 3 seconds, then the display will read as shown in Fig. 2.

Fig. 2



2. SETTING THE CLOCK

While holding the CLK (Clock) button down:


- Press the DAY button until the display shows the current day.
- Press the HOUR button until the display shows the current hour.
- Press the MIN (MINUTE) button until the display shows the current minute.

3. SETTING PROGRAMS

Press the PROG (Program) button once. The display will look as shown in Fig. 3. You will now set up the time in which you want your device turned ON:

- The number 1 in the lower left hand corner indicates that you are now programming EVENT 1.
- Press the Day button repeatedly until the display shows the day in which you want the timer to turn on.

Fig. 3

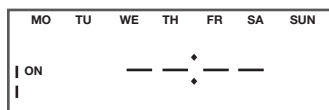


The options are:

- All days of the week (MO TU WE TH FR SA SU)
 - Individual days of the week (MO, etc)
 - Weekdays only (MO TU WE TH FR)
 - Weekdays only (SA SU)
- PRESS the HOUR and MIN (Minute) buttons to set up the time of day when you want the timer to turn on.

Press the PROG (Program) button once again. The display reads as shown in Fig. 4. You will now set up the time in which you want your device turned OFF, in EVENT1.

- Repeat steps 2 and 3 above.

Fig. 4

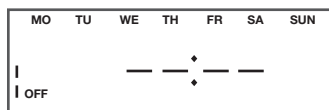

Repeat the ON and OFF program procedures outlined above for each event (up to 7 events), as needed.

When programming is complete, press the CLK (Clock) button to return to the current time display.

4. REVIEWING YOUR EVENT PROGRAMMING

- In the current time display, press the PROG (Program) button repeatedly to check your settings.
- When finished, press CLK (Clock) to return to the current time display.

5. SETTING THE MODE

The Mode acts as an ON or OFF override, or sets the Events to Automatic or Random:

- To override the current program (ON or OFF), press MODE once.
- To override the current program (Automatic), press MODE once.
- To run the events in a RANDOM mode (ON/OFF is +/- 30 minutes of programmed times) press MODE until "RDM" is displayed in the upper left hand corner. The RANDOM mode is a security feature that will give your home a more lived-in look.

6. INSTALLING THE TIMER

Caution: The device must be mounted in a vertical position with the receptacle facing downward and with the receptacle at least 1.4 M above the ground level.

- Plug the timer into an AC outlet.
- Plug the lamp(s) or other device(s) to be controlled into the receptacle(s) at the bottom of the timer.

SPECIFICATIONS:

16/3 AWG SJTW vinyl cord

RATINGS:

125 Vac 60 Hz

13 A Resistive

13 A General Use

1000 W Tungsten

1/2 Hp

500 VA Electronic Ballast

120 V ac 60 Hz 8.3 A Ballast



MADE IN CHINA