


# OUTDOOR MECHANICAL TIMER WITH LIGHTING PROGRAM

**WARNING:** The device must be mounted in a vertical position with the receptacle facing downward and with the receptacle at least 2 feet above the ground level not for water immersion.

## Button Layout

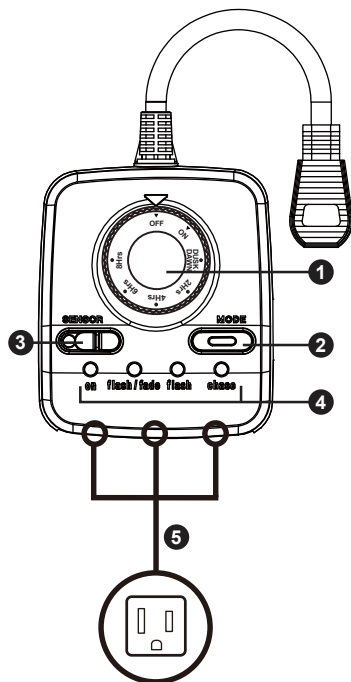

1. Timer dial:\*\*  
2 to 8 hours or dusk to dawn and daily repeat function.
2. MODE: To select one of the following light set programs.  
on → flash/fade → flash → chase
3. Sensor:  
Sensor will turn timer on at dusk and off at dawn.
4. LED indicator
  - on - Always on steady
  - flash/fade - Fading on/Flash
  - flash - Flashing
  - chase\* - Chasing

\* Mode activated when 2 or 3 outlets are used
5. Outlets:  
Plug the LED lamps or Tungsten lamps to be controlled by the timer into outlet.

## Operation

Rotate the dial on the timer to select one of the following settings:

SELECT**	DESCRIPTION
OFF	No power
ON	Constant power
DUSK-DAWN	On at dusk, off at dawn automatically
2 Hrs	On at dusk, stays on 2 hours*
4 Hrs	On at dusk, stays on 4 hours*
6 Hrs	On at dusk, stays on 6 hours*
8 Hrs	On at dusk, stays on 8 hours*

\*Cycle repeats every 24 hours

**CAUTION:** Suitable for use with outdoor appliances. For use ONLY with a three conductor GFCI protected outlet. Do not immerse in water. DO NOT EXCEED RATED CAPACITY.

### Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**SPECIFICATIONS:** 18/3 AWG SJTW vinyl cord

**RATINGS:** 125Vac, 60Hz.

Max. 2.7A Tungsten for each receptacle.

Made in China  
SAVE THESE INSTRUCTIONS!